# EP-9216\_



# EMERGENCY PANEL



# FEATURES

- FIRE ALARM You can give the alarm by connecting with fire sensor.
- AUTO OPERATING FUNCTION You can give the alarm automatically on the next floor of taking fire.

### AUTO ANNOUNCEMENT

When fire, internal mode is operating at all times of siren also external mode is operating that DC power is supplied to DC out 24V terminal of rear panel and it is possible to announce the broadcasting in manless status after operating siren.

### TEST FUNCTION

You can use the test function when you want to check the system or want to training for keep out of the emergency.

\* This model should be used with concerning equipment (emergency switcher-our model ES-9116, matrix-our model PX-9116, relay group-our model RG-9116)

## SPECIFICATIONS


ELECTRICAL

- \*0dB=0.775Vrms
- · Operating Mode ......Auto, Test
- Provided Microphone .....Uni-direction dynamic
  Program Exchange Mode
- .....Business, RM1, RM2, Timer, Emg


### GENERAL

- · Power Source .....DC 24V

# EP-9216

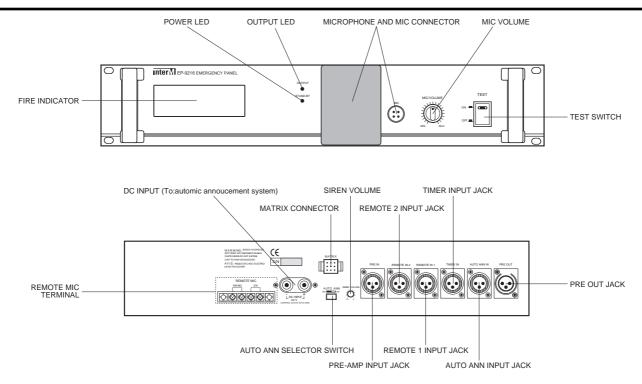

# **BLOCK DIAGRAM**

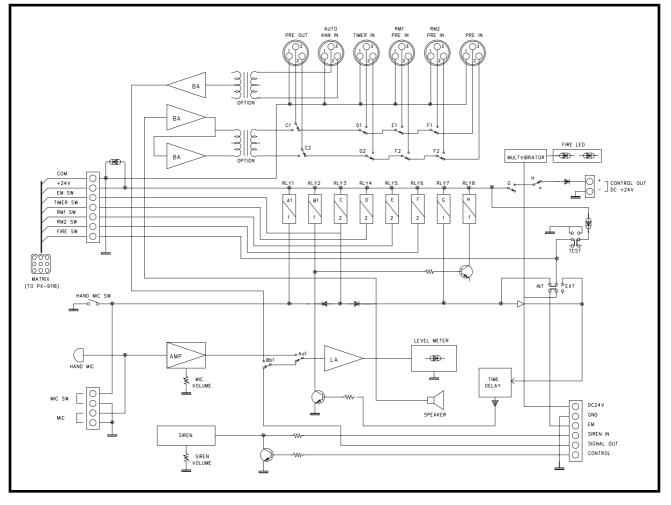

InterM

OFFICE : 653-5 BANGHAK-DONG, DOBONG-KU, SEOUL, KOREA TEL : 82-2-2289-8140~8, FAX : 82-2-2289-8149 Home page : http://www.inter-m.com E-mail : export@inter-m.com